

onia®



COLOR & LIGHT THERAPY

ONIA User's Instruction

[www.onia8.com](http://www.onia8.com)

# Components of ONIA


---

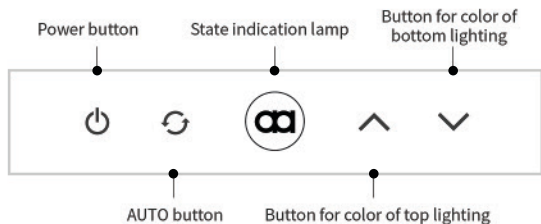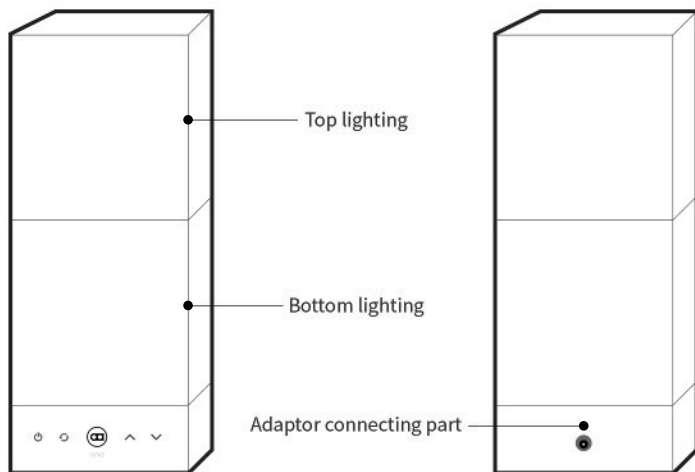

## Installation of ONIA application

---


1. For Android smart phone user, run **Play Store** and then enter 'onia' in search window.  
for i-Phone user, run **App Store** and enter "onia" in search window.

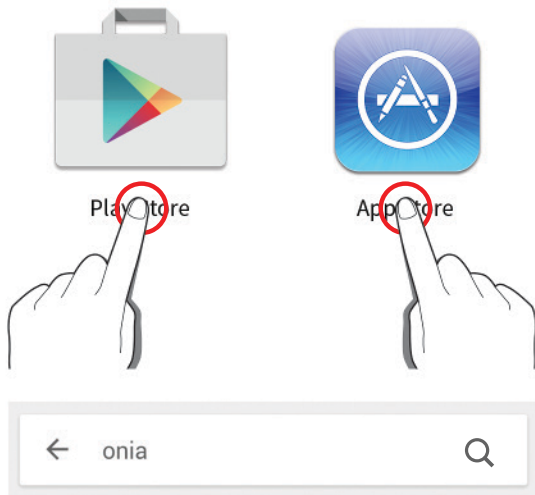


# Connecting Onia application with lighting

Install Onia and connect lighting and smart phone with Bluetooth.

2. Turn on Bluetooth in your smart phone.


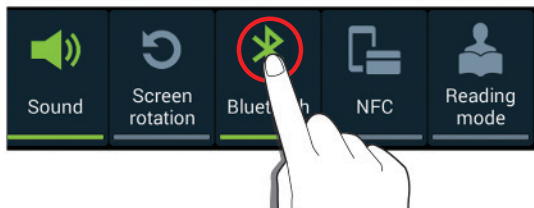


3. Please run Onia application.

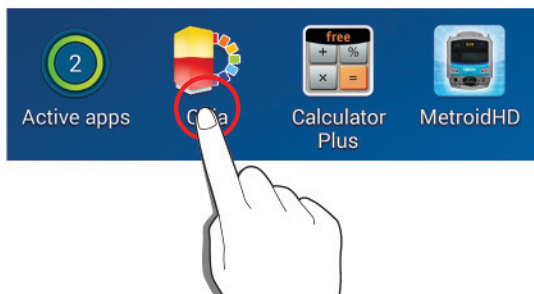

## Installation of ONIA application


4. Press product registration button(+) and search peripheral by pressing registerable lighting search

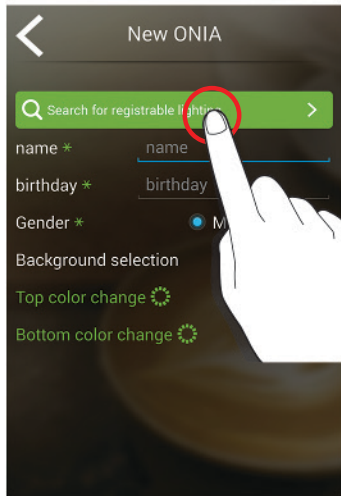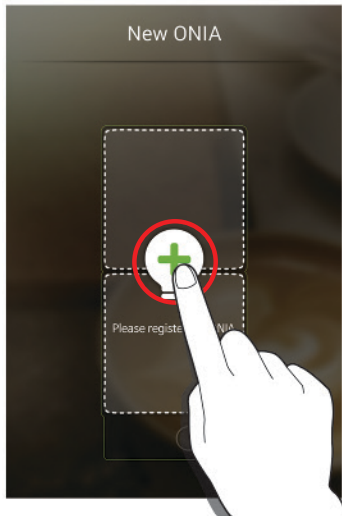

It may take time to search registerable lighting.  
In case no light is found, press lighting search button again.

## Installation of ONIA application



5. Enter name, date of birth and press OK button.

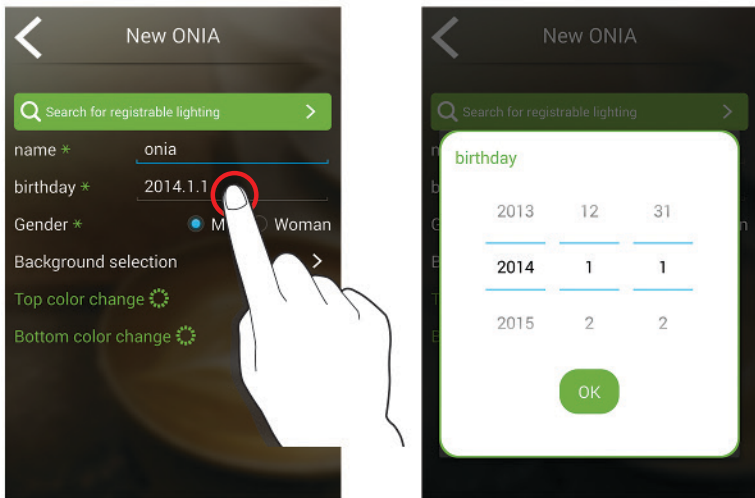

The date of birth will be the data of bio-rhythm in setting bottom color.  
Please enter correct information.

## Installation of ONIA application

6. Set the top color of lighting.

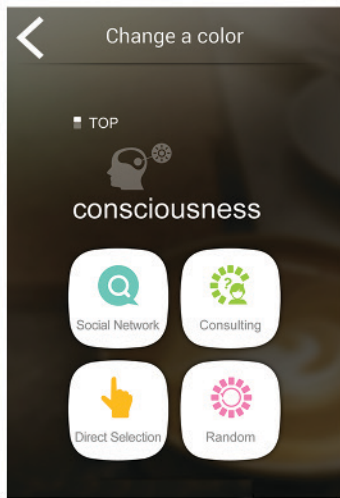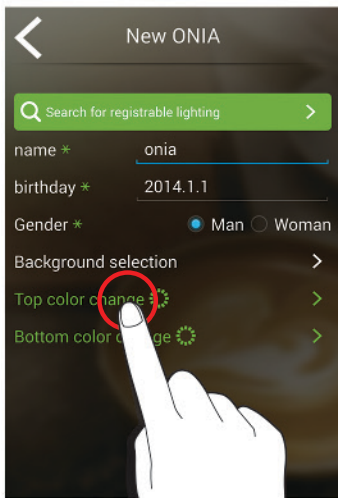

**Social analysis:** Required color is provided through word analysis of SNS.



**Color consulting:** Required color is provided through diagnosis of check list.

**Direct selection:** You can select color as you like.

**Random:** Daily one color is provided randomly.

# Installation of ONIA application

7. Set the bottom color of lighting.

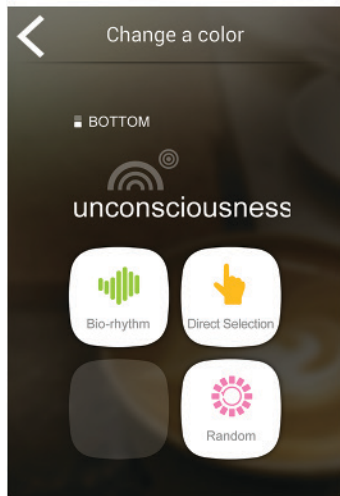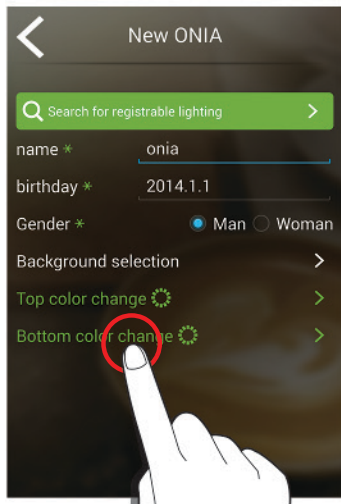

**Bio-Rhythm:** Required color is provided through analysis of physical index, intelligent index and emotional index by date of birth.

**Direct selection:** You can select color as you like.

**Random:** Daily one color is provided randomly.



## Installation of ONIA application




---




8. After setting of lighting, press **ON** button to use lighting.



## Additional registering of Onia lighting

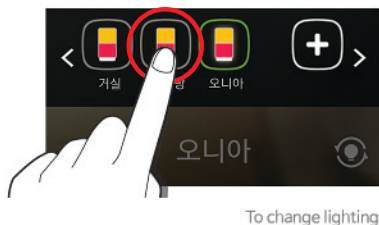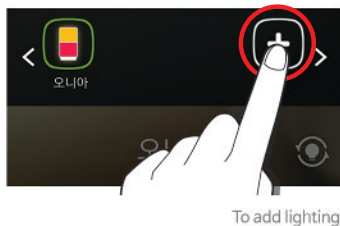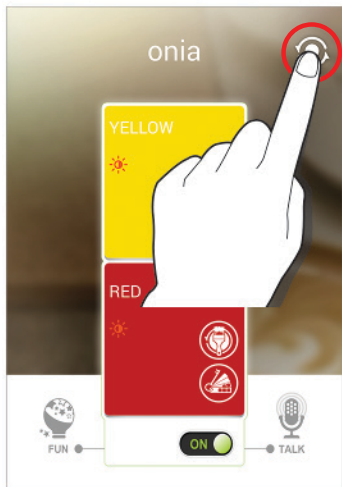In case Onia lighting is more than 2, register product by using product add/change function.








-  Touch product add/change icon to add or change product.
-  Touch product add icon to add another Onia product.  
Total 6 Onia products can be registered in application.
-  When several lightings have been registered, press lighting icon to change to other lighting.

## Using Onia lighting

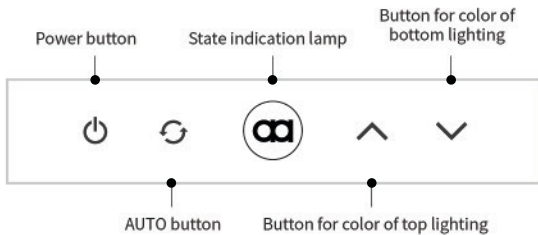---

Press Onia lighting button to control power/AUTO/color change/brightness.





-  Power: Turn lighting power on and off.
-  AUTO: Top and bottom color of lighting are changed automatically in certain interval.
-  Top color: Color and brightness of lighting can be adjusted.
-  Bottom color: Color and brightness of lighting can be adjusted.

Touch top/bottom color icon softly to change color.

Press top/bottom color icon for 2 seconds to adjust the brightness by 5 levels.

## Utilizing Onia application


- Utilize color consulting.

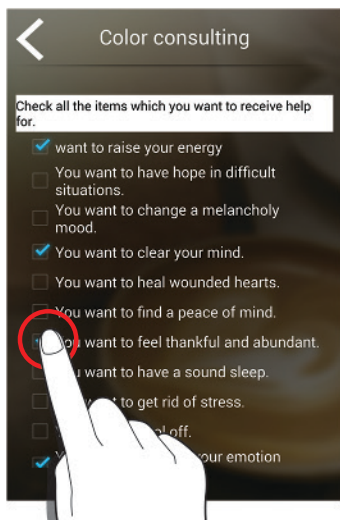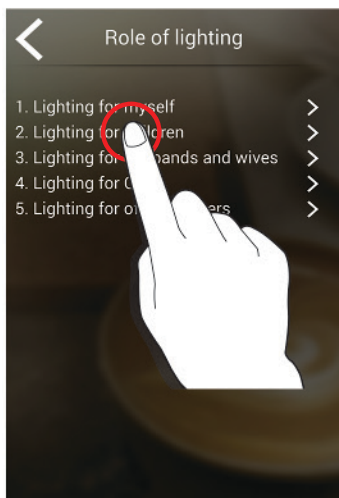

Setting → Set top color → Press color consulting to utilize check list.  
Check all on the list which you want to get help according to lighting function.

## Utilizing Onia application


- Try the optional color selection.

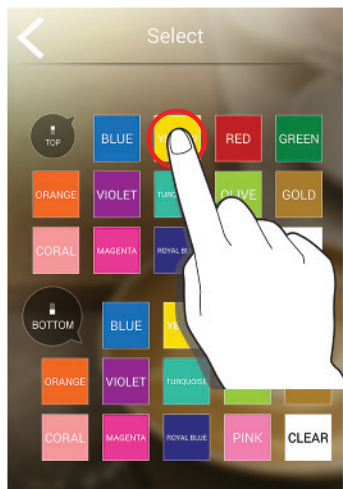

- Touch brush icon in main to change lighting color by pressing color you want.

# Utilizing Onia application



- Utilize color keyword.

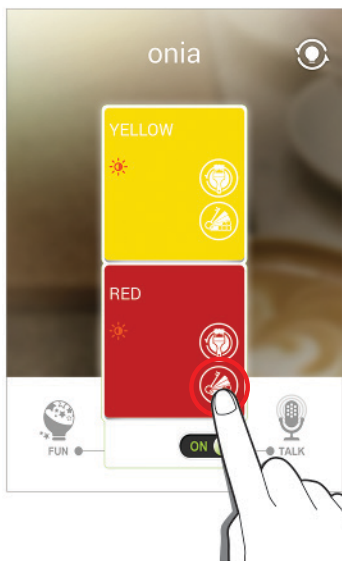

- Touch keyword icon in main to see color keywords shown in current lighting. Find what helps are available by color therapy.

## Utilizing Onia application



- Utilize brightness adjustment.

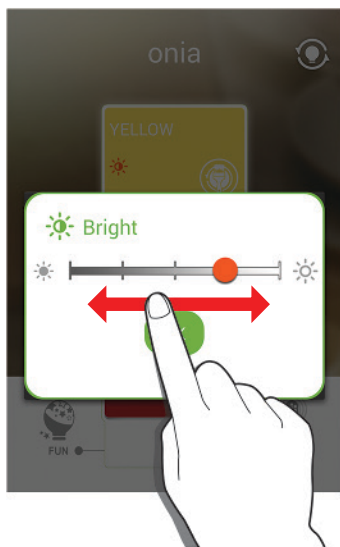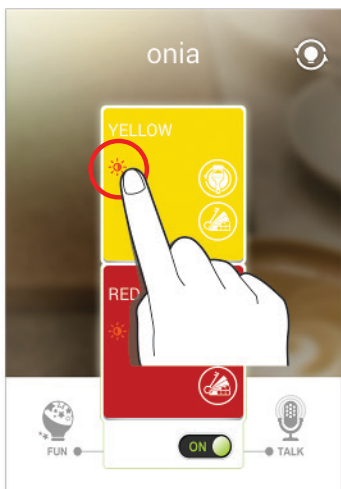


- ☀️ Touch brightness icon in main to adjust the brightness of lighting.  
5 levels brightness is available for all color shown in top and bottom lighting.

# Utilizing Onia application

- Utilize timer function.

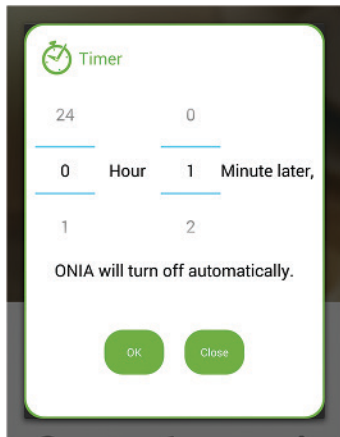
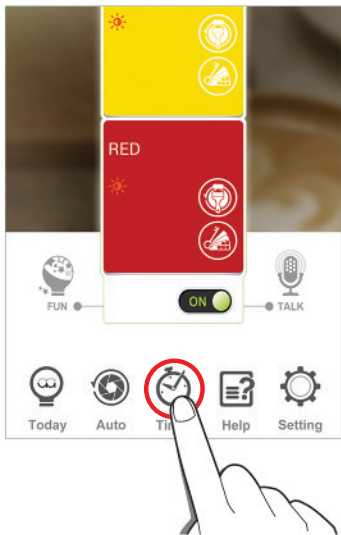





-  Touch timer icon in main to turn off lighting automatically. Lighting is turned off automatically at set time.



# Utilizing Onia application
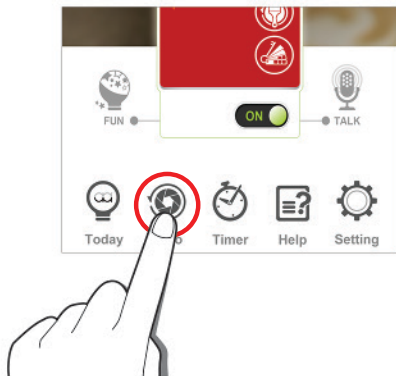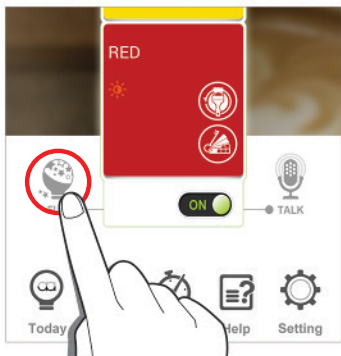
## Utilize FUN/AUTO function



-  Touch FUN icon in main and shake your smartphone, then lighting color is changed. Smart phones recognize shaking action whether left and right direction or up and down direction.
-  When AUTO icon is touched, the color of top and bottom lighting is changed automatically in certain interval making mood in the room.
-  ※ Sorry, this service is supported in Korean.

## Composition / Product specification

---



Desktop



Adapter



Manual

· product name	ONIA
· model name	onia ver8
· composition	desktop , manual , adapter
· lmap type	LED
· rated voltage	220V , 50/60Hz
· power consumption	12V , 1.0A
· product size	140mm(width) X 140mm(depth) X 380mm(height)
· bluetooth version	bluetooth 4.1v

## Cautions in use

---

※ Please read this before use to prevent any accident.

**1. Do not disassemble, repair or modify this product with no authorization.**

- Warrant service will not be available when user disassembled, repaired or modified this product with no authorization from us.

**2. Avoid humid area such as bath room or humidifier.**

- Warrant service will not be available when product was wet by carelessness of user.

**3. Be careful the scratch from the edge of lighting.**

**4. Lighting is not distinctive under direct light. Please use in dark area.**

**5. Please check Blue Tooth power when App is in malfunction.**

- Property of linked product may cause malfunction by Blue Tooth function.  
Please check the Blue Tooth lamp in case of App malfunction.

**6. Do not expose the lighting to eyes closely for long time.**

- Excessive exposure on light may lower sight.

**7. Please use own adopter.**

**8. Do not operate product with wet hand.**

- Wet hand may cause electric shock or fire.

**9. When power is supplied by connecting adopter with lighting, do not touch the bottom touch sensor of the lighting main body.**

- Touch sensor may not work for a moment. Disconnect adopter power cord from main body and then connect again.